

KULLANIM KILAVUZU

Ford Euro 5

9in1 Nox Emülatör




www.nitroibilisim.com.tr

+0850 755 0230

Ford Euro 5 9in-1 NOx Emulator Connection Diagram

- Emülatördeki Beyaz şeritli Siyah kablo → Aracın Gövdesine Şase (terminal 31) Siyah Kablo
 - Siyah şeritli Mavi kablo(CAN Low) → Emulatorün Kahverengi Kablosuna
 - Mavi şeritli Sarı kablo (CANHigh) → Emulatorun Beyaz Kablosuna
 - Kontak Kapat
 - SCR ile ilgili çalışan herşeyin durmasını bekle.
 - OBD Konektörünü sök ve yukarda belirtilen renklere montajını yap.
 - OBD Konektörünü geri yerine tak.
- 4 Şase Beyaz şeritli Siyah kablo
6 CAN High Mavi şeritli Sarı kablo
14 CAN Low Siyah şeritli Mavi kablo
- Kırmızı voltaj ucunu kontak voltajına bağla. (terminal 15)
 - Resimde belirtilen terminals 15 ve 30 sigortalarını sök.
 - Kontak aç ve göstergedeki adblue seviyesini kontrol et 50% veya 70% gösterecek.
 - Herhangi bir arıza kaydı varsa arıza tespit cihazıyla sil.
 - İşlem tamam.

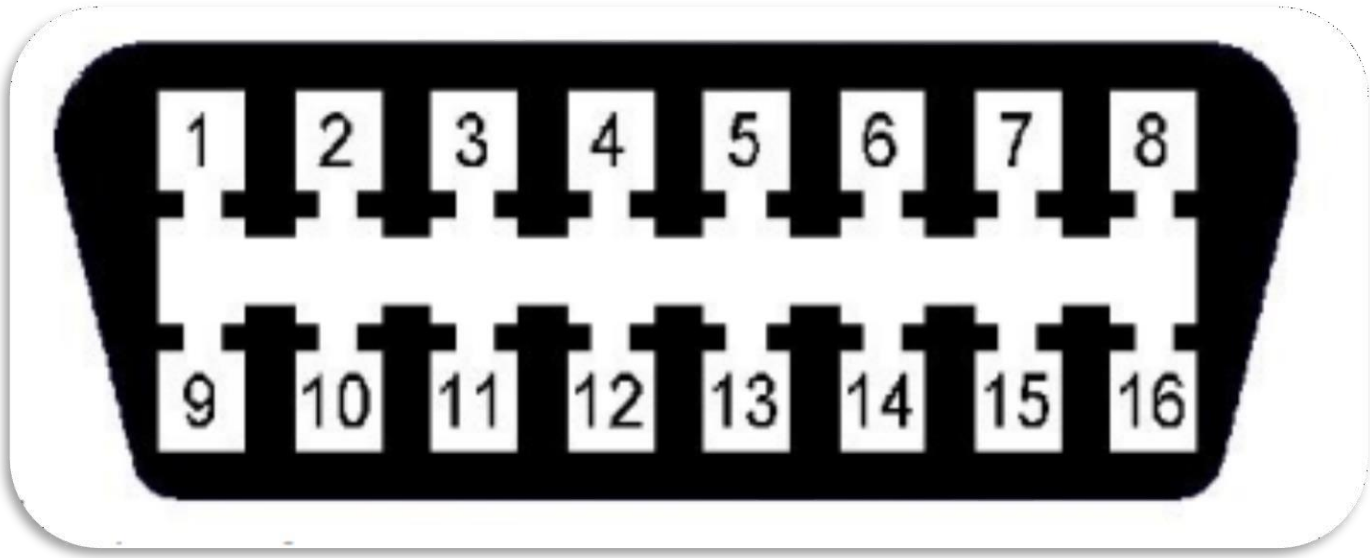

OBD soketi



Adblue iptali emulatu ru montajından sonra DPF'yi kesinlikle iptal etmeniz gerekmektedir!

USER GUIDE

Ford Euro 5

9in1 Nox Emulator



http://

www.nitroibilisim.com.tr


+0850 755 0230

Ford Euro 5 9in-1 NOx Emulator Connection Diagram

- Black wire with White ribbon on the emulator → To the body of the vehicle Ground (terminal 31) Black Wire
- Blue cable with black strip (CAN Low) → To Brown Cable of Emulator
- Blue stripe Yellow cable (CAN High) → to White Cable of Emulator
- Turn Off Ignition
- Wait for everything that works with SCR to stop.
- Disconnect the OBD connector and install it to the colors indicated above.
- Plug back the OBD Connector.

4 Chassis Black cable with white stripe
6 CAN High Yellow cable with blue stripe
14 CAN Low Blue cable with black ribbon.

- Connect the red voltage lead to the contact voltage. (terminal 15)
- Remove fuses 15 and 30 to the terminal indicated in the picture.
- Turn on ignition and check the adblue level on the indicator will show 50% or 70%.
- If there is any fault record, delete it with the diagnostic device.
- Done.

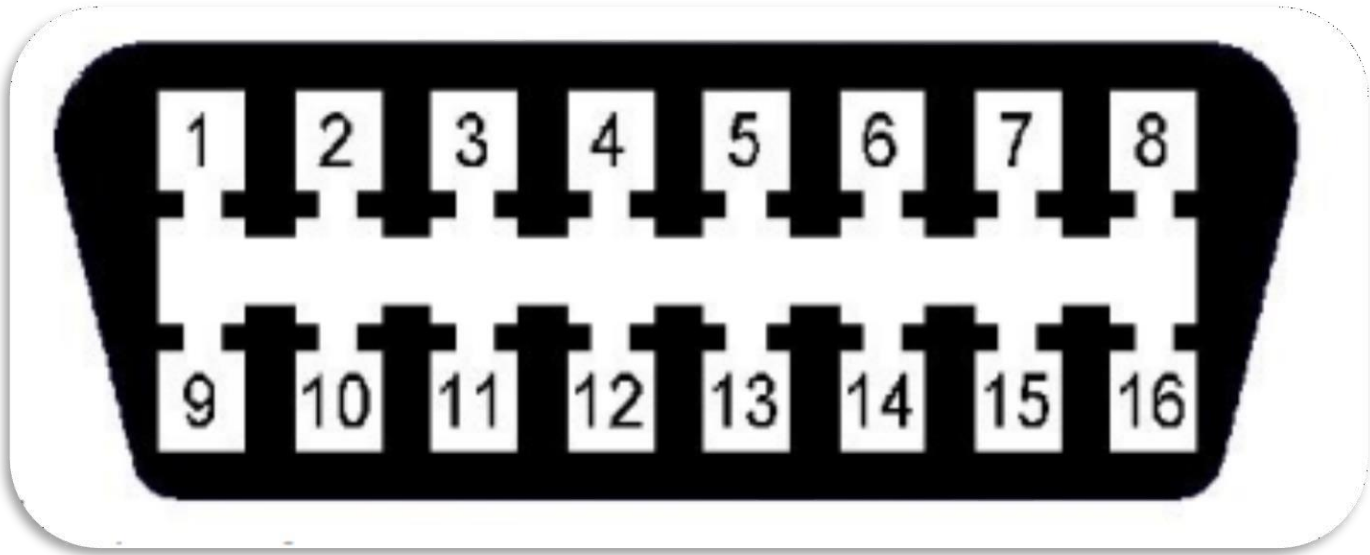

OBD socket



After installing the Adblue cancellation emulator, you should definitely cancel the DPF!